 


PV-RC100W

 
HD WIFI Battery Case Camera for iPower 6/6S

User Manual

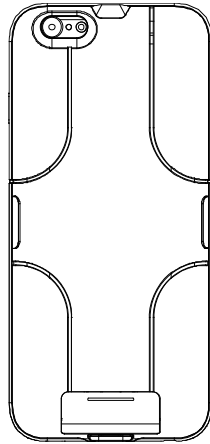

Regarding the Device

- 1) Power On/Off Button
- 2) REC/WIFI Button
- 3) Memory Card Slot
- 4) Camera Lens
- 5) USB Charge Port
- 6) Charge LED (White color)
- 6~8) Power Level LED (White color)
- 8) WI-FI LED (Green Color)
- 9) Power & REC LED (Red color)

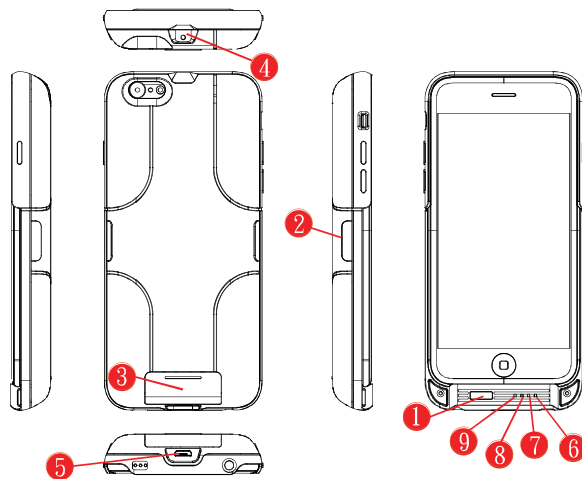

B. Charge

- 1) Connect the attached USB cable to the slot 5, connect to PC in the other end
- 2) 1st one blue LED go flash under charge

C. Insert the SD Card

Open the lead on the back then place the SD Card into SD Card Slot properly; press the SD Card for taking out the SD Card.

*If the memory card can not be read successfully (the LED will alert the status) please re-plug the card again to check.

D. Button Function

1) Power On/Off:

Push & hold the button 1 until the device start to vibrate 3 short times to power on the device; push & hold the button 1 until the device start to vibrate one long time then 2 short times to power off the device successfully

2) Record On/Off:

Push the button 2 once to start or stop the recording

3) WIFI On/Off:

Push & hold the button 2 for 3 seconds to open or close the WIFI (In default, the WIFI always on after power on)

4) Left Power Indication:

a. Under Power Off: Push the button 1 once to show the left.

b. Under Power on: Push the button 1 once, the device will always show first the working status then the power level status after it

5) Back to default: (Including the setup SSID and Password)

Push & hold the button 2 for 10 second while under power on status

6) Charge:

The Button 6 will keep flash while charging then keep light on once fully charged

E. LED Indication

1) Blue LED: Power on/off

2) Pink LED: WIFI status

a. LED stay off: WIFI off. b. LED stay flash: WIFI on & connected

c. LED stay on: WIFI on & stand by

3) Red LED: Recording status

a. LED stay off: Recording off. b. LED stay flash: Recording on

c. LED stay on: Memory empty alert/No detect memory card

4) First 3 LED from left: Power Level indication

 
Remark: All LED indication will auto go off after every 15 seconds due to the confidential concern, simply push the button 1 once to gain back all LED indication status

F. APP download QR Code (Scan the QR code below to download the APP or directly type & search "SecurePro Plus" in App store or Google play for installation)




Android/iOS Smart Link Setup Steps


Step1. Enter into setup of the phone

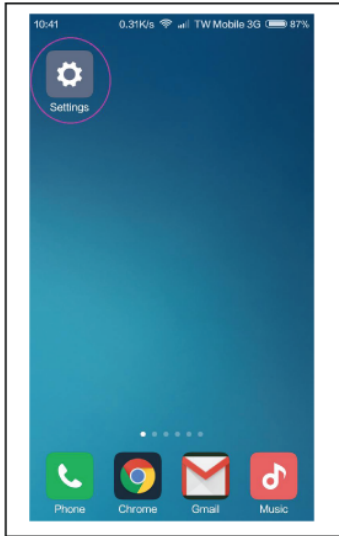

 
Step2. Choose the WIFI from the device

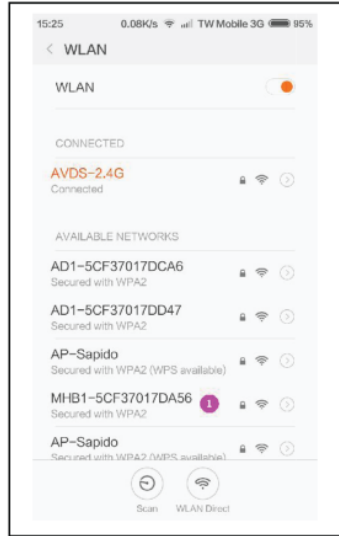

 
Step3. Input the default Password "12345678"

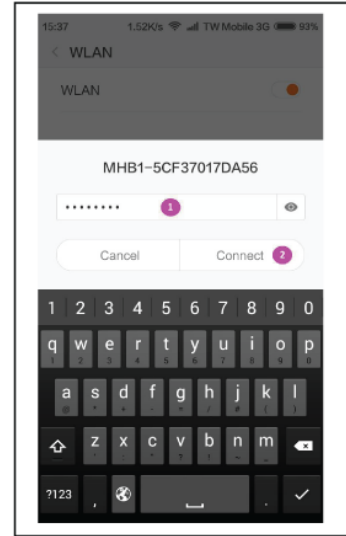

 Step4. Open the APP

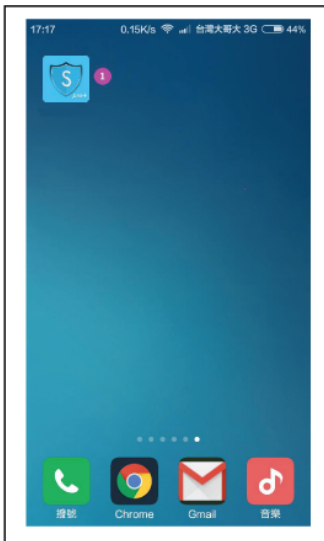

 
Step5. Push to add a new device

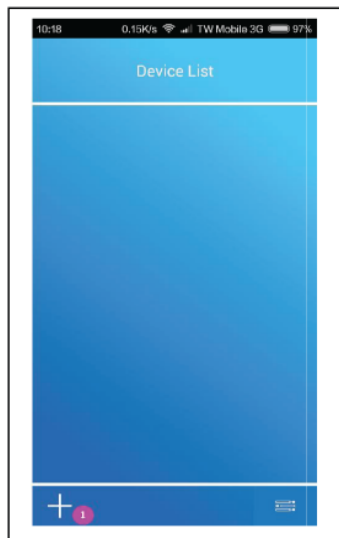


Step6. Scan the QR code label on the device



 
Step7. Push to enter

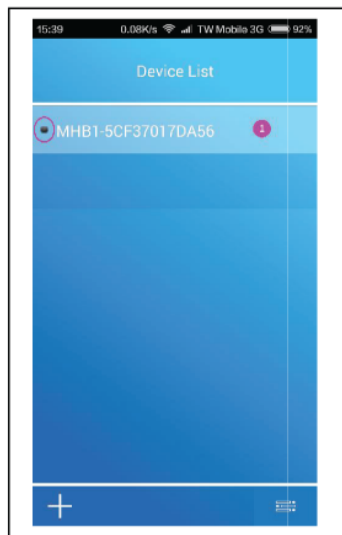

 
Step8. Input the default password "12345678"

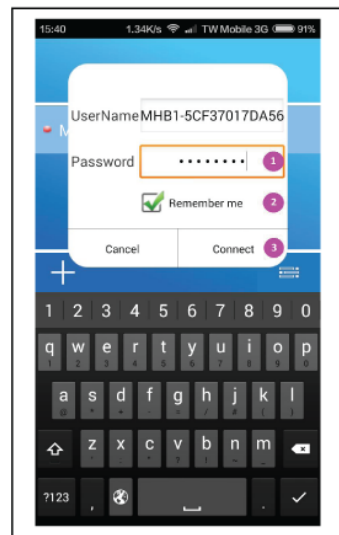

 
Step9. Push to Preview
(Red dot stands for connecting successfully otherwise not)

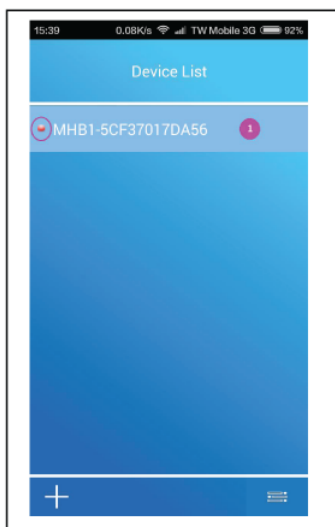

 
Step10. Push the setup button
(Until this step you ardy achieve to the local mode in success, go further steps to hook on with internet mode then)

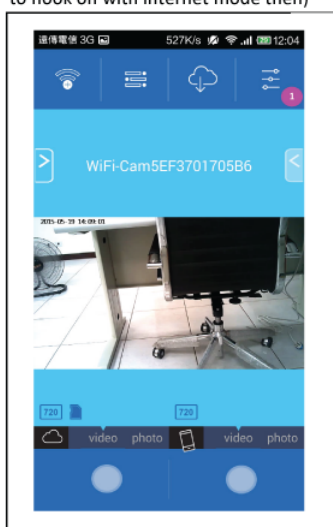

 
Step11. Push the WIFI coloumn

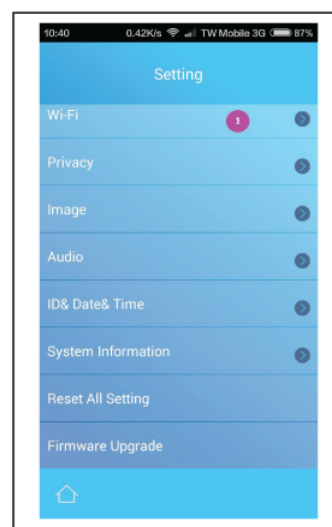

 Step12 Enter the SSID and password under client page then push below to confirm
(This is entering the SSID & password of the AP in your home or nearby you)

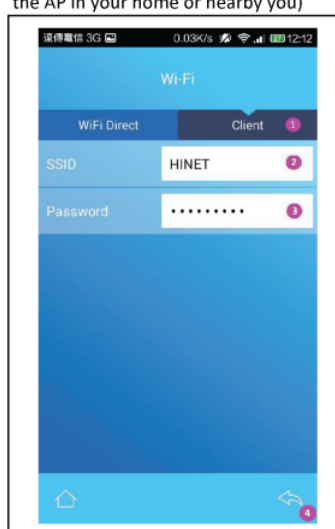

 
Step13. Push the confirm button

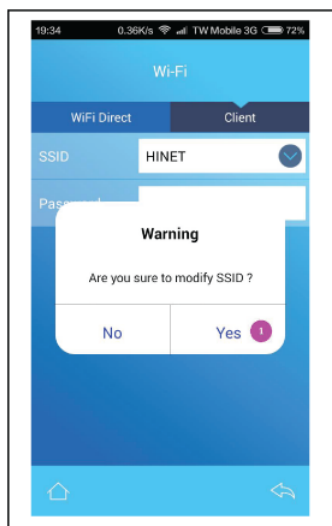


Step14 Push to back to the device list page



 Step15. Check if the red dot is on then push to re-enter

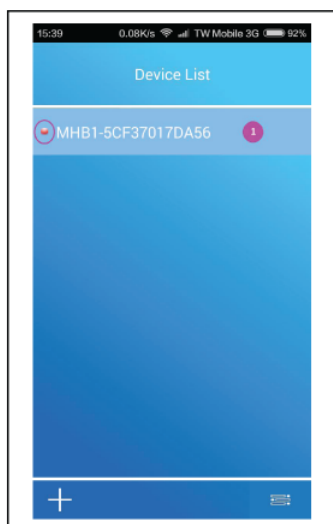

 Step16. Able to preview then internet connection completed

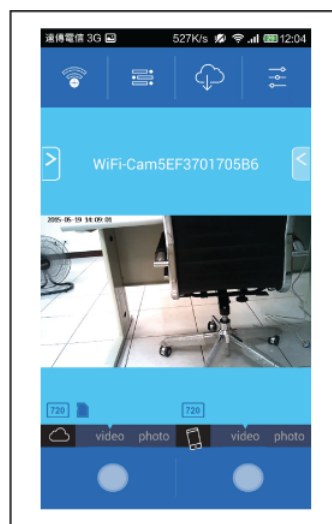


II. APP UI description

- 1) Back to WI-FI which you need to connect device list.
- 2) Cell phone video and Photo archive folder.
- 3) SD card video host and Photo archive folder.
- 4) Setting.
- 5) Quick setting.
- 6) Host SD card resolution when recording.
- 7) SD card reminder.
- 8) Motion detection recording.
- 9) Resolution when recording.
- 10) Host SD card recording icon.
- 11) Host SD card recording.
- 12) Host SD card photograph.
- 13) Smartphone recording icon.
- 14) Smartphone recording.
- 15) Smartphone photograph.
- 16) Host SD card recording button.
- 17) Smartphone recording button



 - 1) Host SD card red light constant lighting while recording
- 2) Smartphone recording red light blinking.

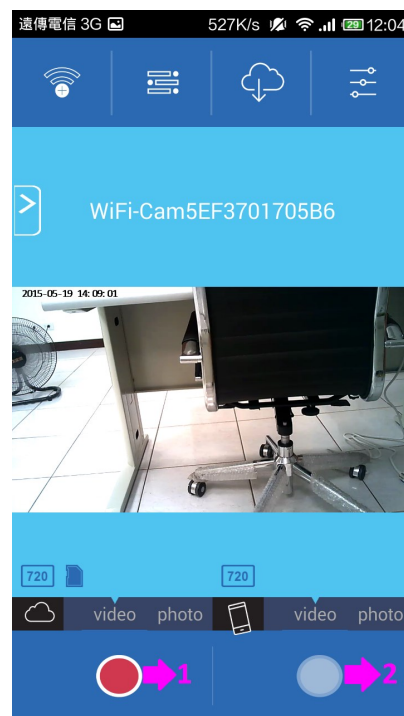

Browsing Mobile Video and Photo Archive Information.

- 1) Film archives.
- 2) Photographic archives.
- 3) Film and photo all archive.
- 4) Mark archive what you need.
- 5) File name.
- 6) Mark all archive.
- 7) Unmark all archive.
- 8) Back to homepage.
- 9) Play button.
- 10) Delete button.



 
Play The Video File.

- 1) Video playback window.
- 2) Back to last page.
- 3) Pause button.




Browsing the Host SD Card Video and Photo Archive Information.

- 1) Film archives.
- 2) Photographic archives.
- 3) Film and photo all archive.
- 4) Continuous video file named beginning with Rec.
- 5) Motion detection recording named beginning with MRec.
- 6) Mark archive what you need.
- 7) File name.
- 8) Mark all archive.
- 9) Unmark all archive.
- 10) Back to homepage.
- 11) Download archive of SD card to smartphone.
- 12) Play button.
- 13) Delete button.

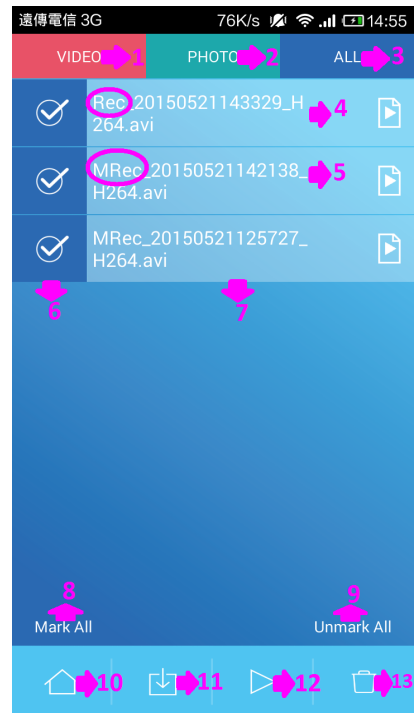

Setting

 - 1) WI-FI setting.
- 2) Privacy setting.
(After switch privacy setting, entry APP need password.)
- 3) Video setting.
- 4) Date and time setting.
- 5) System information.
- 6) Reset all setting.
- 7) Firmware upgrade.
- 8) Back to homepage.

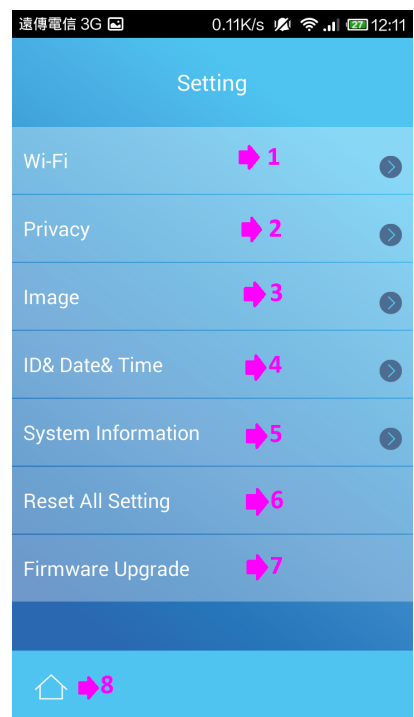

WI-FI Setting

1) WI-FI host name.

2) WI-FI password

*You may change the default password to your preferred here to keep the WIFI connection more confidential

 
3) Way of encryption.

4) WI-FI SSID invisible or not.

5) Host WI-FI off.

6) Back to homepage.

7) Back to last page.

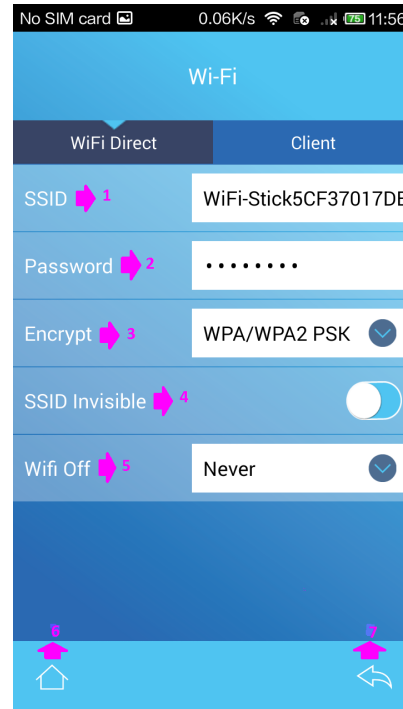


1) Encryption Column Option.

2) No encryption

3) WEP encrypt (64bit)

4) WPA/WPA2/PSK encrypt (128bit)—Default

 *Not suggest to change

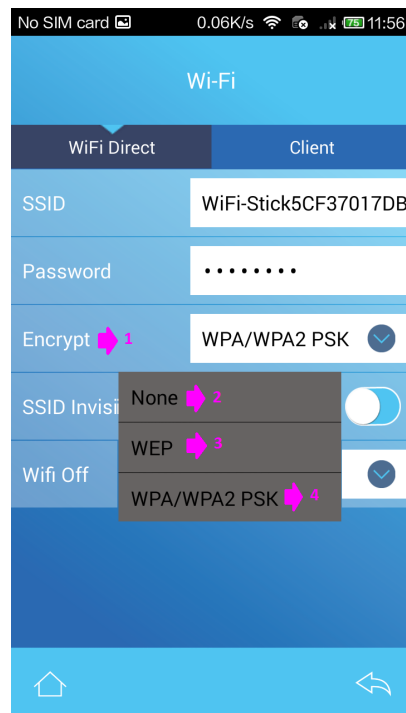

1) WIFI column option

 
2) Once power on, WI-FI is always on

3) WIFI turn off after 1 minute (If no connection detect)

4) WIFI turn off after 3 minute (If no connection detect)

5) WIFI turn off after 5 minute (If no connection detect)

*Once WIFI turn off it has to be switched on from the device, can't be re-opened by the phone remotely

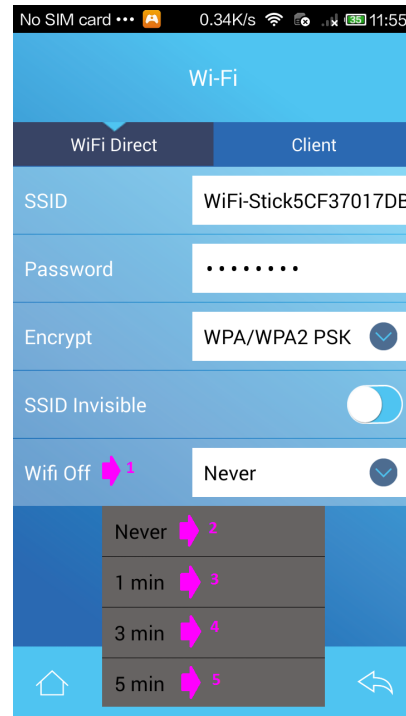

1) Privacy On/Off

White doc on the left : Privacy off

White doc on the right : Privacy on

2) Privacy password. (Number Only)

3) Confirm password again.

4) Back to homepage.

5) Back to last page

*Be aware the privacy function only lock on the running of this APP, all other functions in the phone remain normally.

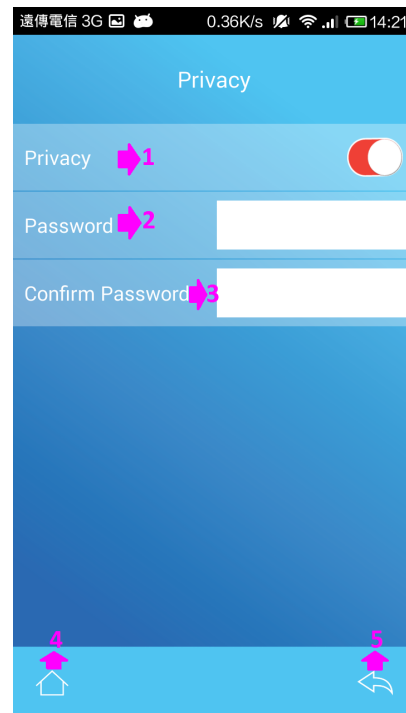 


Image Setting

- 1) Play parameters.
- 2) Resolution. (D1、720P)
- 3) Frame choice. (10、15、20、25)


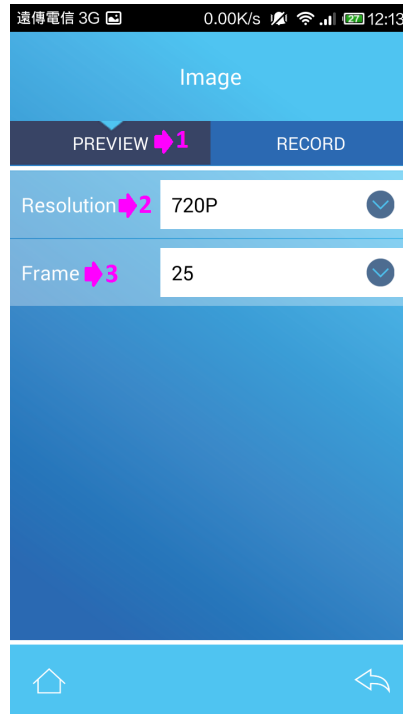 


Image Setting

 - 1) Recording mode.
Continuous recording / Motion detecting recording
*When execute the motion record, after setting it up in The menu, it need to be pushed once for the either record button on the preview page to start to operate.
- 2) Recording time. (1、3、5、10 min)
- 3) SD Over-Write on/off :
White dot on the left : Overwrite Setting off.
White dot on the right : Overwrite Setting on.
- 4) Back to homepage.
- 5) Back to last page.

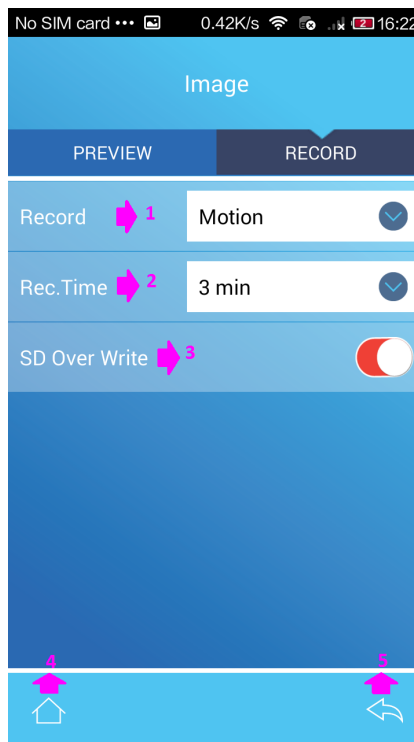

Date and Time Setting

1) Time display function :

White dot on the left : Date display close.

 
White dot on the right : Date display open.

2) Date format.

3) Time format.

4) Synchronization with device time.

5) Confirm the setting.

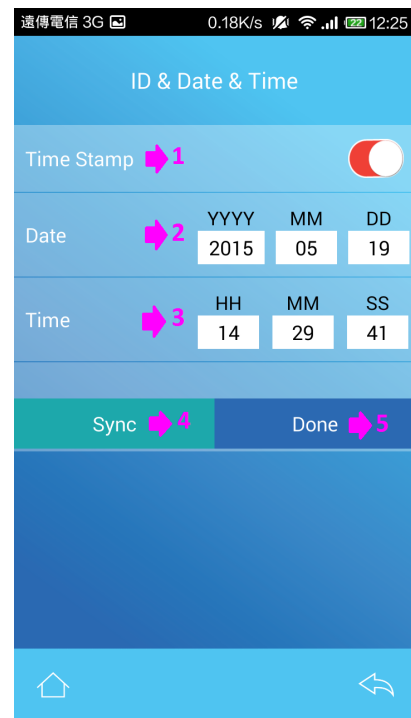

System Information

1) Card Memory Capacity.

 
2) Card Memory Usage rate.

3) APP Version.


4) Device initial firmware version.

* Upgrading method of devices :


Saving the initial firmware on Micro SD card then put the card into device, connecting device with APP and choose initial firmware version.

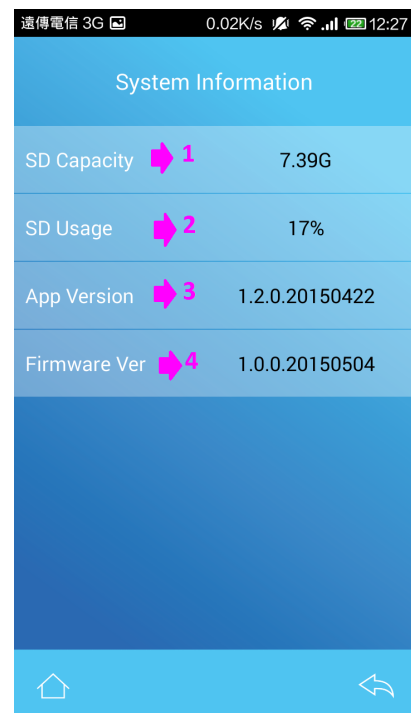

 
1) Reset all setting.

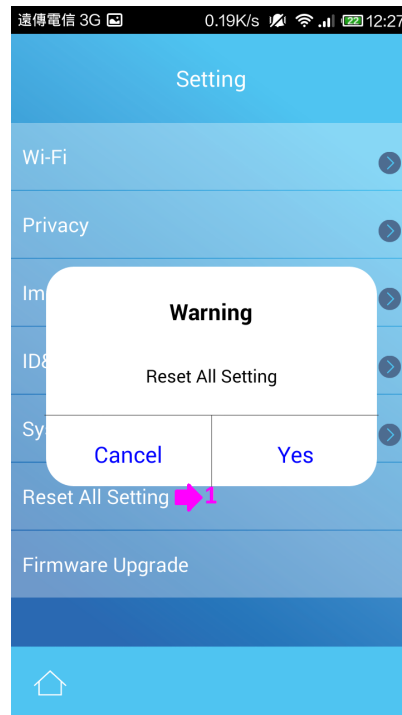

 1) Hot key for the spy mode page

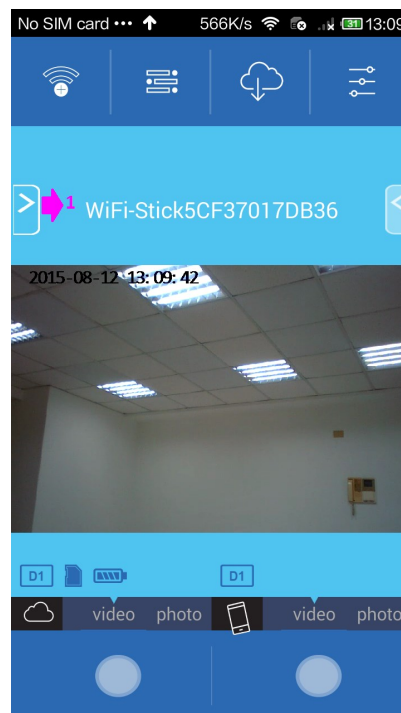

 Go out from spy mode page by sliding it from right to left

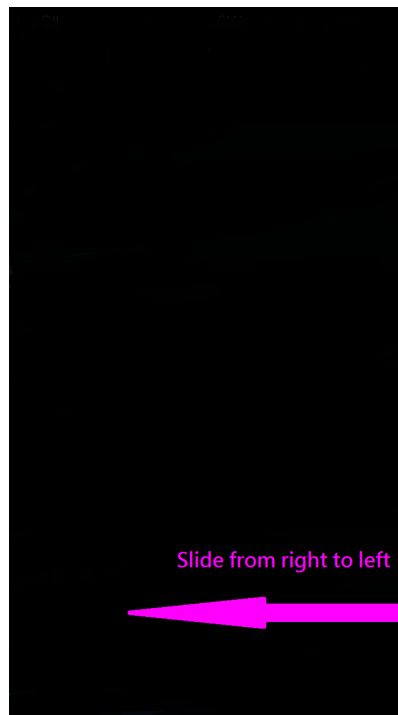

- 1) Quick setting.
- 2) Resolution setting. (D1 \ 720P)
- 3) Brightness setting.
- 4) Contrast setting.
- 5) Flip Top to Bottom.
- 6) Mirror left-right model.
- 7) Mic volume when recording.

