 


## 1. Names and Parts - DVR

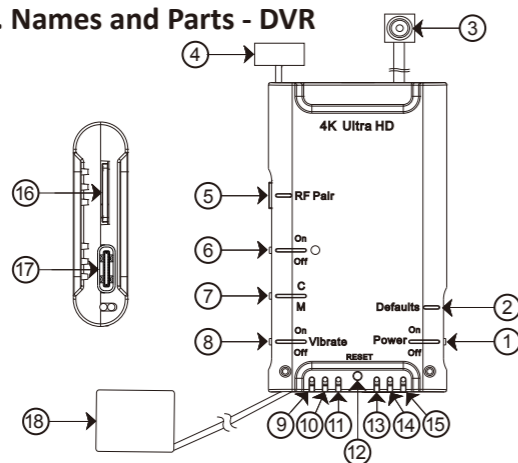 


- |  |                         |
|--|-------------------------|
| 1. Power On / Off Switch                             | 9. Charging (green) LED |
| 2. Default Key                                       | 10. Wi-Fi (orange) LED  |
| 3. Camera Lens                                       | 11. Pairing (blue) LED  |
| 4. Wi-Fi Antenna                                     | 12. Reset Key           |
| 5. RF Pairing Button                                 | 13. Pairing (red) LED   |
| 6. Wi-Fi On / Off Switch                             | 14. Rec (red) LED       |
| 7. Continuous Recording / Motion Detection Recording | 15. Power (blue) LED    |
| 8. Vibration Switch                                  | 16. Memory Card Slot    |
|  | 17. USB Port            |
|  | 18. Extended Battery    |

\* This product is for Law Enforcement and Home Security Use Only!


1

## 2. Names and Parts - RF Remote

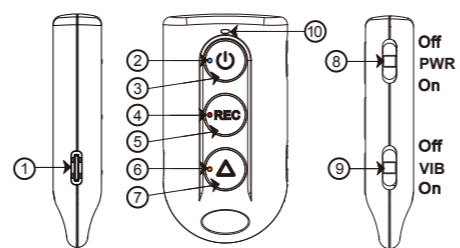

- |                              |  |
|------------------------------|--|
| 1. USB Port (Charge)         | 8. Remote Power On (down) / Off (up)                           |
| 2. DVR Power On LED (Blue)   | 9. Remote Vibration On (down) / Off (up)                       |
| 3. DVR Power On / Off Button | 10. Remote charge LED (Green) / Remote Command sent LED (Blue) |
| 4. DVR Rec LED (Red)         |  |
| 5. DVR Rec On / Off Button   |  |
| 6. DVR Wi-Fi LED (Orange)    |  |
| 7. DVR Wi-Fi On / Off Button |  |


## 3. Package Content

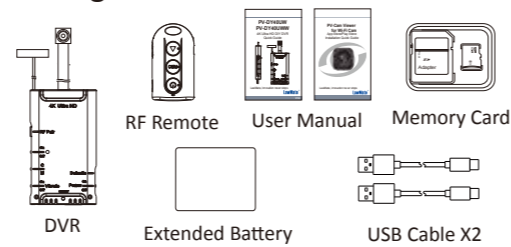 


2

## 4. Charge the Battery
 
### 4-1 Charge the DVR

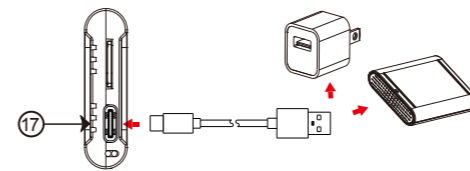

 4-1-1 Plug the Type-C USB end of the cable to ⑰ and connect the other end to a USB power source (as shown above), or plug it to a power bank of your own choice.




4-1-2 You can also use the extended battery as power source. Connect the extended battery with the device and charge the battery with USB cable via USB power source. Once the battery is fully charged, you can remove the USB cable and adopt the battery as the power source.

- Solid green LED ■ - charging.
- Green LED goes off - fully charged.

3

### 4-2 Charge the RF Remote

 

4-2-1 Power off the remote control by sliding ⑧ upwards.

※ It is important to turn off the remote control while charging and make sure it is fully charged everytime before use.

4-2-2 Connect the Type-C USB end to ① on the remote control.

4-2-3 Connect the other end of the USB cable to a USB charger, and connect the charger to an AC wall outlet.

- ※ Check ⑩ for battery / charging status
- Solid green ■ - Charging
  - Green LED turns off - Fully charged
  - Blue LED blinking ■ - Battery low

※ The standby time of the remote control is approximately 18 hours. Please always remember to turn it off after use.

4

## 5. Format Memory Card

Press and hold ②, and turn on the device. Release when the red LED blinks. After the format is done, device will automatically turn off.

※ It is important to format the card when using it for the first time.

## 6. Operation (DVR only)

### 6-1 Power On / Off

Switch ① upward to turn on; downward to power off.

### 6-2 Recording

6 seconds after device is on, it will start to record automatically.

### 6-3 Vibration

Switch ⑧ upward to turn on, or downward to turn off.

### 6-4 Wi-Fi

With device powered on, switch ⑥ upward to turn on, or downward to turn off.

For more information about Wi-Fi connection set up, please refer to Wi-Fi quick guide.

### 6-5 Reset

When the device functions abnormally, press ⑫ once.

### 6-6 Restore to all factory settings:

With device powered on, press and hold ② for 10 seconds, and release. Red and orange LED will flash 3 times, indicates that the unit is restored to factory setting.

\* Warranty will be void if serial number sticker is tampered.

5

## 7. Pair up with the RF Remote

7-1 Power on the DVR and then long press ⑤ on DVR, and release the button until you see the blinking blue & red LED, which indicates that the DVR is waiting to be paired up.

7-2 Power on the remote control and enable the vibration alert. Press Rec button on the remote control, with the remote vibrates twice and the blinking blue & red LED go off, the remote is successfully paired up with the DVR.

## 8. Operation on RF Remote

### 8-1 For Remote Control:

#### 8-1-1 Power On / Off

Slide "Pwr" switch downward to power on; upward to power off.

#### 8-1-2 Vibration

Slide "Vib" switch downward to turn on; upward to turn off.

### 8-2 For DVR

#### 8-2-1 DVR Turn On / Off

Long press ③ on the remote at least 3 seconds to power on / off the DVR.

#### 8-2-2 Recording

Press ⑤ on the remote once to start or stop the recording.

#### 8-2-3 Wi-Fi

Press ⑦ on the remote once to enable or disable Wi-Fi.

6

## 9. LED Indicators

| LED Indicators      | Device Status    |
|---------------------|------------------|
| Blinking Blue LED   | Low Battery      |
| Solid Blue LED      | Device On        |
| Blinking Orange LED | Searching Wi-Fi  |
| Solid Orange LED    | Wi-Fi Connected  |
| Solid Green LED     | Device Charging  |
| Blinking Red LED    | Memory Card Full |
| Solid Red LED       | Recording On     |

## 10. Vibration Alert

Rec On - 1 long vibration  
Snap Shot - 1 short vibration  
Wi-Fi On - 2 short vibrations  
Wi-Fi Off - 2 short vibrations  
Power Off - 1 short vibration

## 11. Date and Time Setting

 
Please refer to the Synchronize the Time steps on the PV Cam Viewer guide.

## 12. Download Files

12-1 Use a memory card reader to transfer files from the memory card to the computer.  
12-2 Connect the device to the computer with memory card inserted. Turn on the device and it will work as a flash drive.

7

## PV-DY40UW PV-DY40UWW 4K Ultra HD DIY DVR Quick Guide

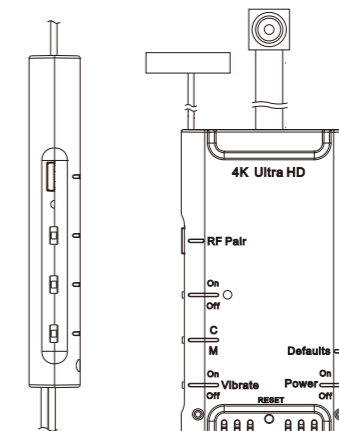

LawMate, innovation never stops

LawMate®

V1.0