

Spektra Europe SPK-REC User Manual


- Voice Recorder made in EU
- Incredibly lightweight and small in size
- High quality Knowles microphone



HOW TO USE:

Before use, it is recommended to recharge the battery.

- SPK-REC is turned on by pulling the switch towards the USB-C port
- After turning on the blue and red LED flash and then only red LED flashes 3 times meaning the recording has started.

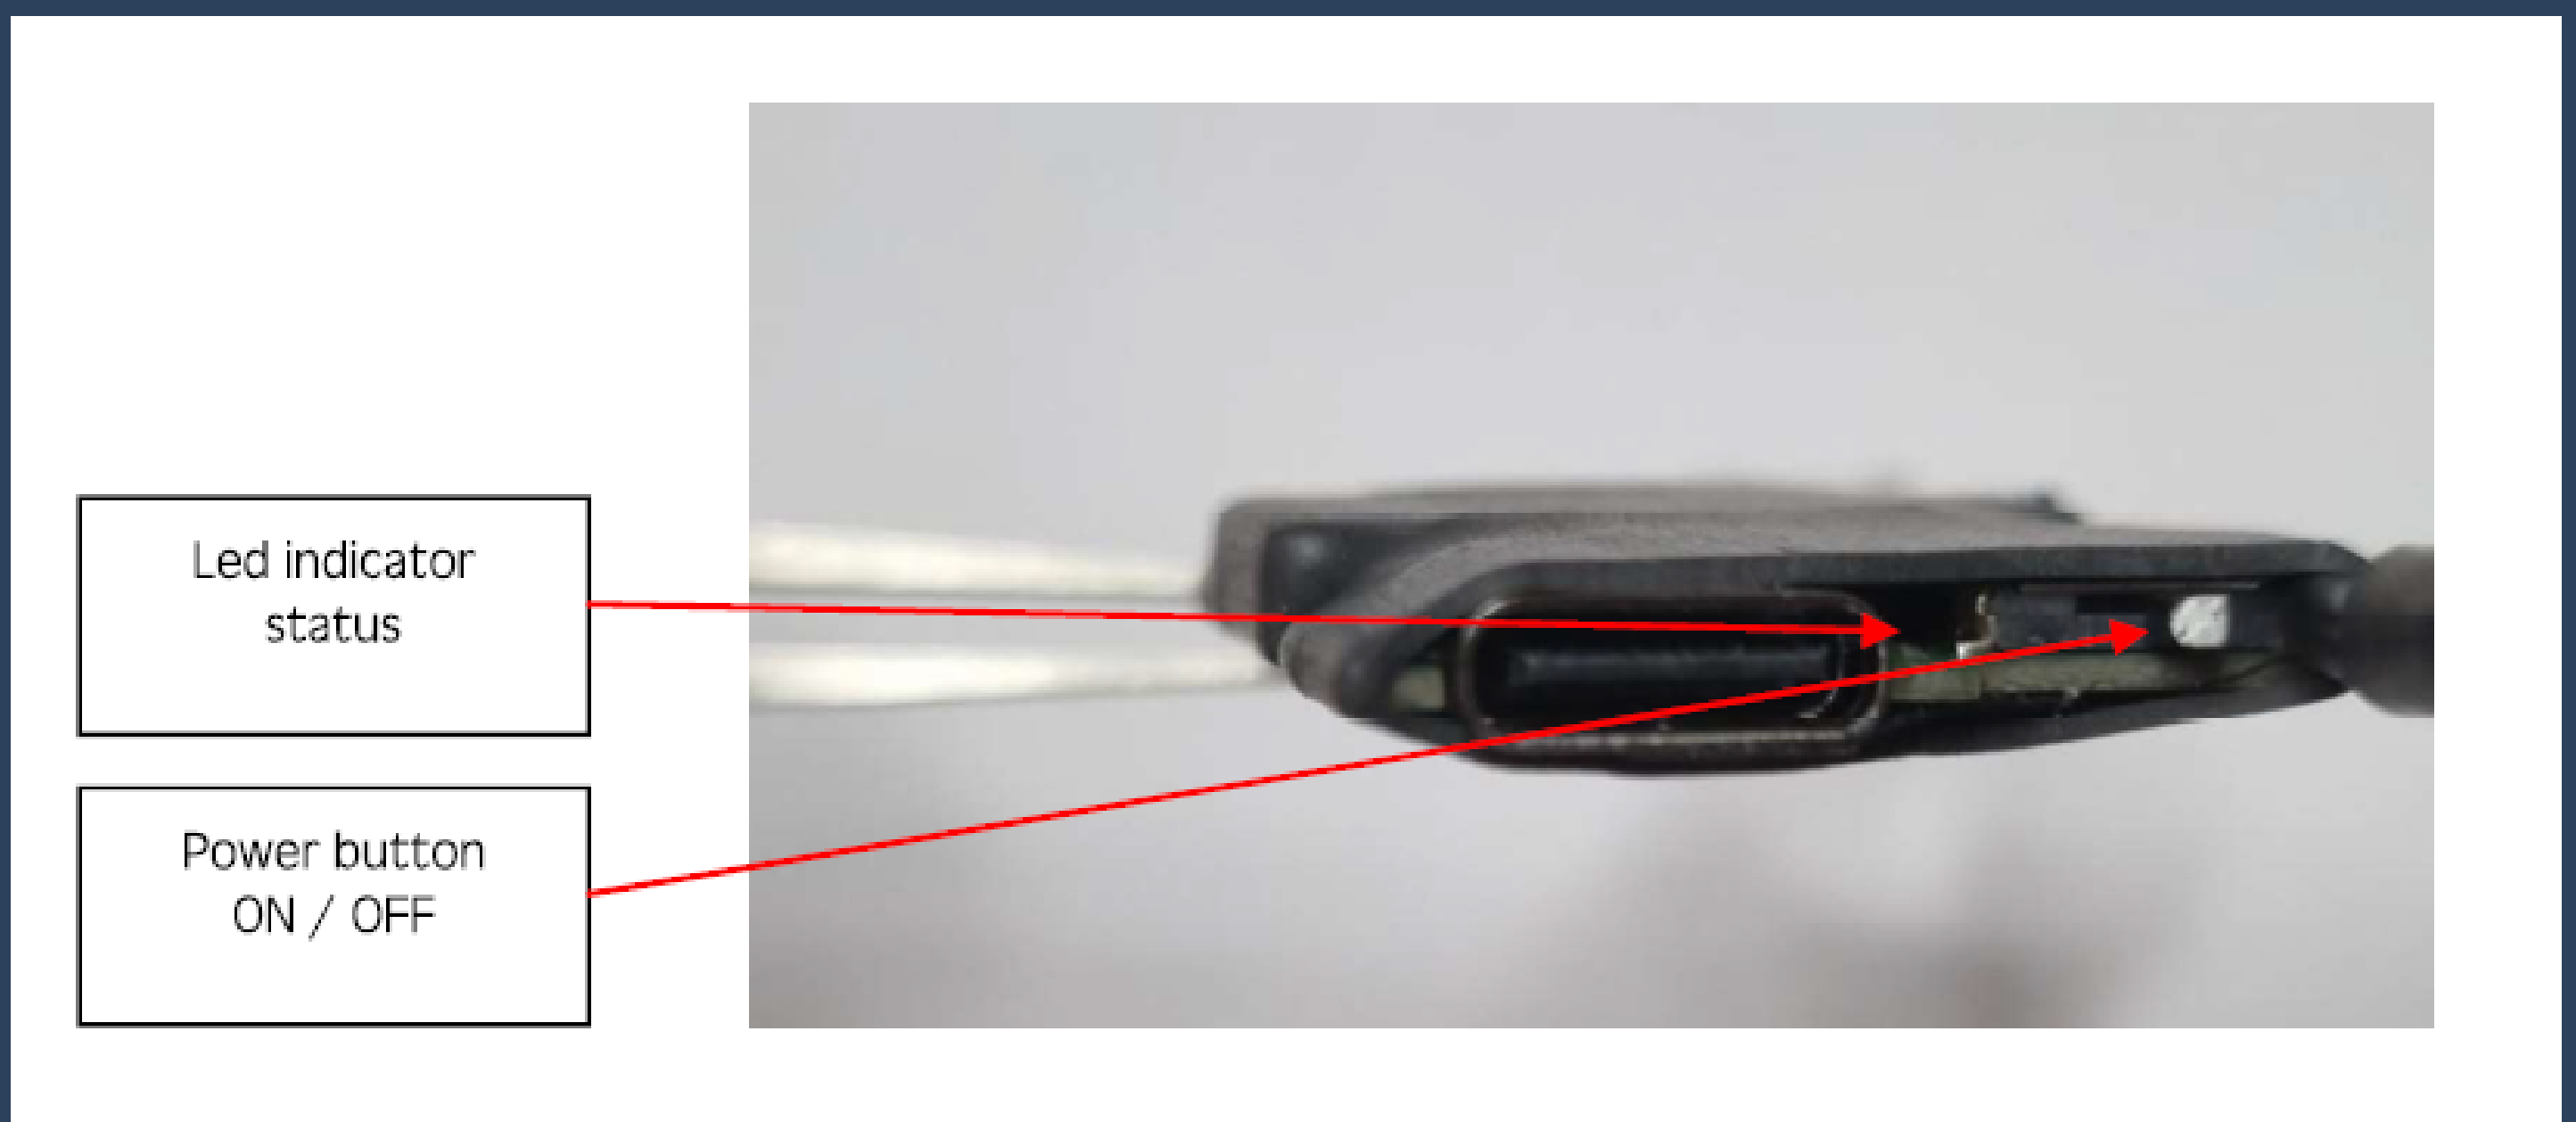

When connecting the device via USB cable, you will see the .txt with configuration as shown below:

MRECSET - Notepad

File Edit Format View Help

TIME:10:17 2023/10/09

VOR:4 //Voice Activated Setting (0--7), 0 is off, 1-7 is voice activated on. Advice 0

BIT:4 //Bit Rate Setting(1--4), 1 is 32K, 2 is 64K, 3 is 128K, 4 is 192K. Advice 4

GAIN:5 //Recording Sensitivity (1--7). Advice 5

PART:10 //Recording File Segmented Time(10--240 minutes). Advice 60

TIME - setting time and date

VOR - voice activation option. With smaller values such as 1 or 2 a strong background noise will be necessary to activate the device while setting on 6 or 7 will make the device sensitive on soft noises.

BIT - recording audio quality

GAIN - microphone gain sensitivity

PART - setting the length of the audio files in minutes

ADDITIONAL INFORMATION:

All files will be WAV type audio files with time and date details (Example: V20230607-190030.WAV) It will correspond to a file created in VOR with the date and time as follows:
07/06/2023, 19:00:30

The 64GB memory guarantees over 30 days of recording with audio quality stream at 192Kbps.

The device consumes about 6-7mAh in VOR and 192Kbps. It can work for approximately 50 hours.